




Binks Model 80-295 (2 QT.) "STEADI-GRIP" PRESSURE CONTAINER

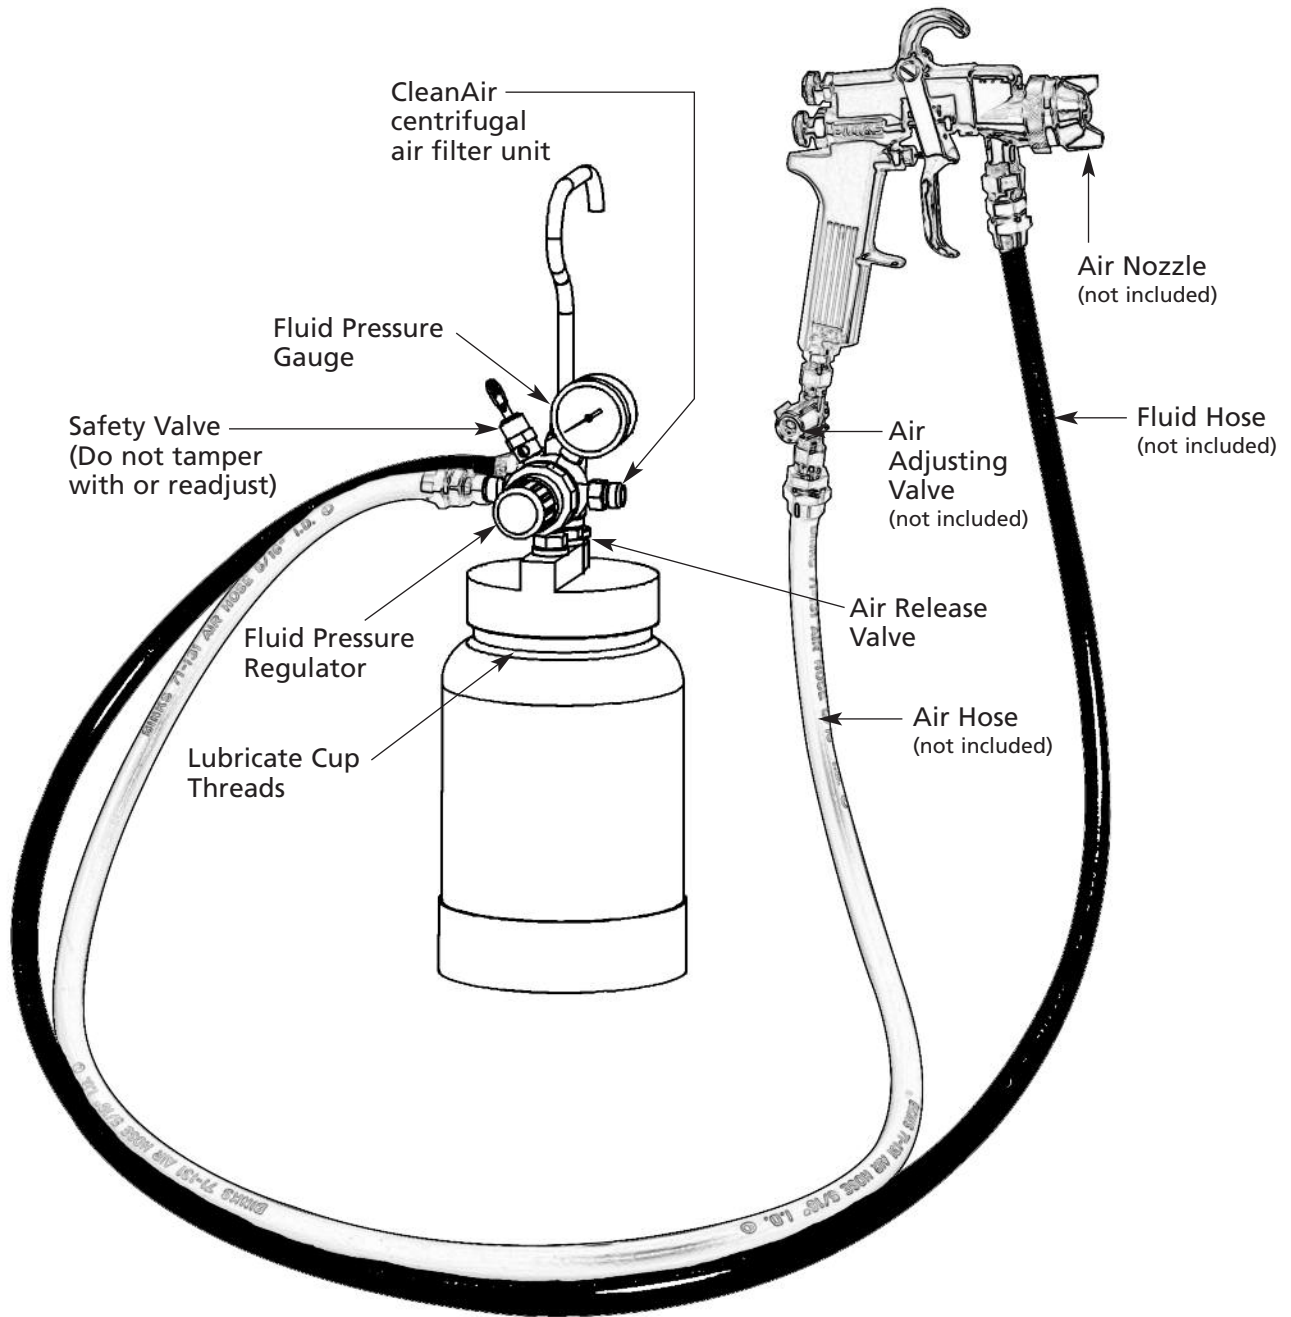

SPECIFICATIONS

MAX. CUP PRESSURE	50 psig	3.5 bar	AIR INLET & OUTLET CONNECTION.....	1/4 NPS (m)
OVERALL HEIGHT			FLUID INLET & OUTLET CONNECTION	3/8 NPS (m)
WITH AUXILIARY HANDLE	16-15/16 in.	430 mm	FLUID CAPACITY	2 qts. (US) 1.9 ltr
W/O AUXILIARY HANDLE	13 in.	330 mm	WEIGHT	3 lb. 3 oz. 1.46 kg
BASE DIAMETER	5-1/4 in.	133 mm		

Replaces
Part Sheet
77-2823R-6

Part
Sheet
77-2823R-7

In this part sheet, the words **WARNING**, **CAUTION** and **NOTE** are used to emphasize important safety information as follows:

⚠ WARNING

Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

⚠ CAUTION

Hazards or unsafe practices which could result in minor personal injury, product or property damage.

NOTE

Important installation, operation or maintenance information.

⚠ WARNING


Read the following warnings before using this equipment.

**READ THE MANUAL**

Before operating finishing equipment, read and understand all safety, operation and maintenance information provided in the operation manual.

**WEAR SAFETY GLASSES**

Failure to wear safety glasses with side shields could result in serious eye injury or blindness.

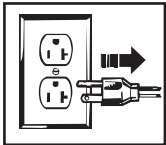**DE-ENERGIZE, DISCONNECT AND LOCK OUT ALL POWER SOURCES DURING MAINTENANCE**

Failure to De-energize, disconnect and lock out all power supplies before performing equipment maintenance could cause serious injury or death.

**OPERATOR TRAINING**


All personnel must be trained before operating finishing equipment.

**EQUIPMENT MISUSE HAZARD**

Equipment misuse can cause the equipment to rupture, malfunction, or start unexpectedly and result in serious injury.

**KEEP EQUIPMENT GUARDS IN PLACE**

Do not operate the equipment if the safety devices have been removed.

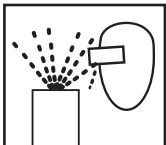**PROJECTILE HAZARD**

You may be injured by venting liquids or gases that are released under pressure, or flying debris.

**PINCH POINT HAZARD**

Moving parts can crush and cut. Pinch points are basically any areas where there are moving parts.

**AUTOMATIC EQUIPMENT**

Automatic equipment may start suddenly without warning.

**INSPECT THE EQUIPMENT DAILY**

Inspect the equipment for worn or broken parts on a daily basis. Do not operate the equipment if you are uncertain about its condition.

**NEVER MODIFY THE EQUIPMENT**

Do not modify the equipment unless the manufacturer provides written approval.

**KNOW WHERE AND HOW TO SHUT OFF THE EQUIPMENT IN CASE OF AN EMERGENCY****PRESSURE RELIEF PROCEDURE**

Always follow the pressure relief procedure in the equipment instruction manual.

**NOISE HAZARD**

You may be injured by loud noise. Hearing protection may be required when using this equipment.

**STATIC CHARGE**

Fluid may develop a static charge that must be dissipated through proper grounding of the equipment, objects to be sprayed and all other electrically conductive objects in the dispensing area. Improper grounding or sparks can cause a hazardous condition and result in fire, explosion or electric shock and other serious injury.

**FIRE AND EXPLOSION HAZARD**

Never use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in equipment with aluminum wetted parts. Such use could result in a serious chemical reaction, with the possibility of explosion. Consult your fluid suppliers to ensure that the fluids being used are compatible with aluminum parts.



**CA PROP
65**


PROP 65 WARNING

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PROVIDE THIS INFORMATION TO THE OPERATOR OF THE EQUIPMENT.

FOR FURTHER SAFETY INFORMATION REGARDING BINKS AND DEVLBISS EQUIPMENT, SEE THE GENERAL EQUIPMENT SAFETY BOOKLET (77-5300).

Binks Model 80-295 (2 QT.) "STEADI-GRIP" PRESSURE CONTAINER

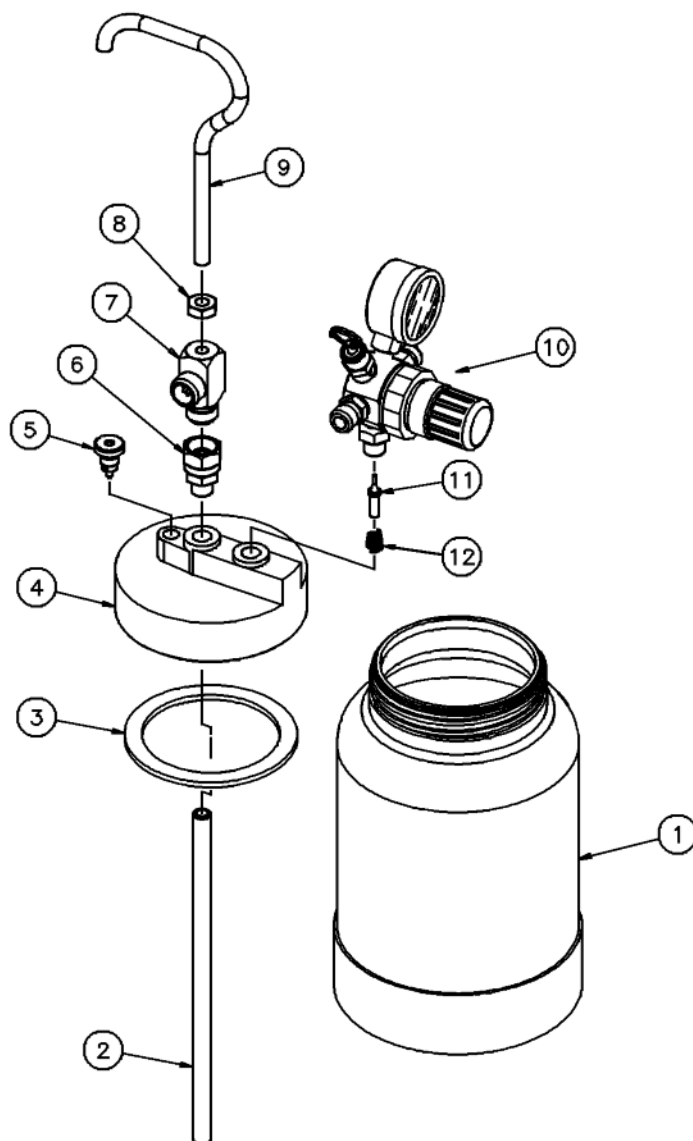

PARTS LIST

When ordering, please specify Part No.

ITEM NO.	PART NO.	DESCRIPTION	QTY.	ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	80-4	CUP, 2 QUART	1	9	83-1899	HANDLE	1
2	80-34	TUBE, MATERIAL	1	10	85-440	AIR REGULATOR ASSEMBLY	1
3	80-11*	GASKET, TRI SEAL FOAM	1			(MAX. 50 PSI FLUID PRESSURE)	
4	80-297	COVER	1			(SEE PART SHEET 2817)	
5	80-12	AIR RELEASE VALVE	1	11	80-267	VALVE	1
6	72-1022 ▲	CENTERPOST ASSEMBLY	1	12	60-7	SPRING	1
7	80-33	OUTLET	1	13	85-441	2ND REGULATOR KIT	—
8	20-353	JAM NUT, 5/16-18	1			(MAX. 60 PSI FOR ATOMIZING)	
9	83-1899	HANDLE	1			AIR CONTROL) (ORDER SEPARATELY)	

* Available in quantity pack. For Tri-Seal Gaskets, order 80-11-5 (qty. of 5).

▲ Available from Binks distributors only.

OPERATION AND CLEANING

External Mix Air Nozzle Application

OPERATION:

1. Connect hose as shown in diagram on front page.
2. Fill cup with *strained* fluid mixed in accordance with manufacturer's recommendations on label of container.
3. Fasten cover securely.
4. Close air adjusting valve by turning clockwise.
5. Set air pressure at CleanAir filter unit to between 35 and 80 PSI, depending upon atomization desired.
6. Set regulator on pressure cup to approximately 10 PSI for enamels; 5 PSI for lacquers. (Turn knob clockwise to increase pressure; to reduce pressure, turn knob counter-clockwise. Always release air in cup by momentarily opening air release valve on cover when attempting to reduce pressure.)
7. Open air adjusting valve.
8. With trigger fully pulled back, make several fast spray strokes against a flat surface. After adjustment of pressure, proper atomization will be indicated by an even distribution of finely divided paint particles.

IMPORTANT

The most efficient atomization air pressure is the lowest air pressure that will properly atomize the paint. This will minimize the overspray, deposit more paint on the surface and eliminate paint waste.

If a faster coverage is necessary, first increase fluid pressure and then adjust atomization air pressure. If a slower coverage is more desirable, first reduce the fluid pressure and then adjust atomization air pressure. Always attempt to maintain the lowest pressures for maximum efficiency.

For ease of removing cup cover and to prevent leakage, always thoroughly grease the threads on the cup.

CAUTION

If the cup is accidentally tipped over or held at too great an angle, fluid will load up the underside of cup cover, and leak into regulator. In the event this happens, clean immediately!

Internal Mix Air Nozzle Application

OPERATION:

NOTE

The steps are the same as with the external mix nozzles, except the air and fluid pressure settings are different.

The internal mix air nozzle accomplishes atomization by mixing the air and fluid within the air nozzle.

1. Close air adjusting valve by turning clockwise.
2. Set air pressure at CleanAir filter unit to approximately 45 PSI.
3. Open air adjusting valve and allow air to enter the gun.
4. Set fluid pressure at 20 lbs. and adjust higher or lower until desired atomization is effected. Air pressure should be alternately adjusted.

CLEANING

1. Open air release valve on pressure cup cover.
2. Reduce pressure in cup until gauge reads zero, (turn knob counter-clockwise).
3. Loosen cup cover and set fluid tube on angle in cup.
4. Loosen air nozzle two turns, place cloth over nozzle and pull the trigger to force paint into cup.
5. Remove cover and clean cup and cover thoroughly.
6. With approximately 1/4 to 1/2 cup of clean solvent, attach cover and set fluid pressure at approximately 10 PSI.
7. Close air adjusting valve at spray gun.
8. Trigger gun and allow solvent to flow into a container until it flows clear.
9. Remove solvent, then clean air nozzle. If any dirt appears in orifice, clean with tooth pick Blow nozzle and cup dry. Replace nozzle and cover loosely.

CAUTION

Never use a wire or metal object to clean the air nozzle—they may damage the nozzle and cause faulty spray.

NOTE

Never allow solvent to remain in cup; solvent vapors tend to reduce service life of gasket. Separate storage of cup and cover recommended.

WARRANTY

This product is covered by Binks' 1 Year Limited Warranty.

Binks Sales and Service: www.binks.com

BINKS

U.S.A./Canada Customer Service
195 Internationale Blvd.
Glendale Heights, IL 60139
630-237-5000

Toll Free Customer Service
and Technical Support
800-992-4657

Toll Free Fax
888-246-5732

77-2823R-7 Revisions: Trademark updates;
(P1) revised diagram; (P3) Revised Parts List.